

STORAGE COMPARTMENT

2021+ FORD BRONCO

CMBR-02



TOOLS REQUIRED

- 10mm, 15mm (deep) Socket
- #5 Allen Bit
- Trim Clip Tool
- WD-40 (Optional)
- Flathead Screwdriver/Small Pry Bar

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 2 Hours
- Time to install this should only take about two hours.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL



Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (8) M8x20 Allen
- (2) Drain Caps
- (1) Heat Shield




STEP 1 | Peel back the paper from the heat shield and install it onto the back of the mount.

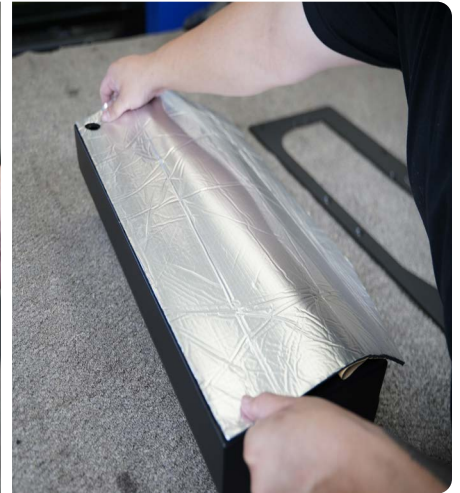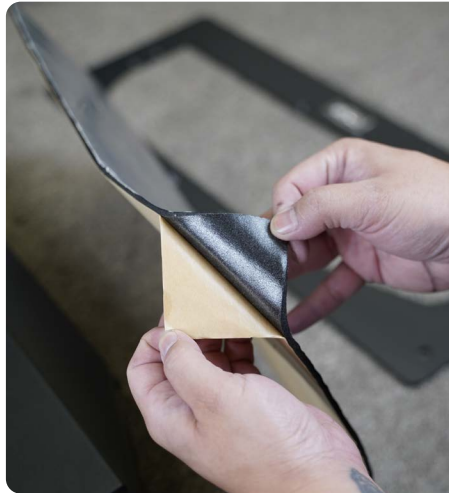


INSTALLATION MANUAL

STEP 2 | Install drain cap from the inside.

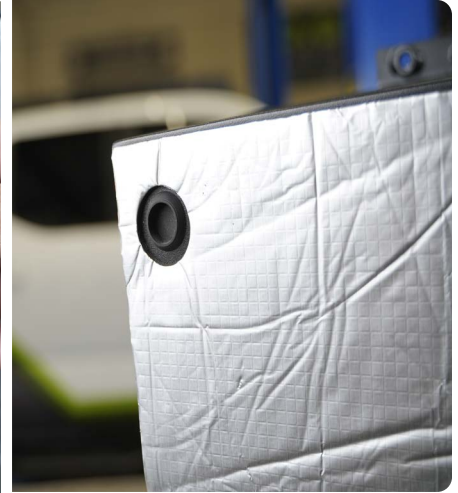

STEP 3 | Use a trim clip tool to remove the plastic covers from the tie-down hooks.

The number of tie-downs varies on trim of vehicle.

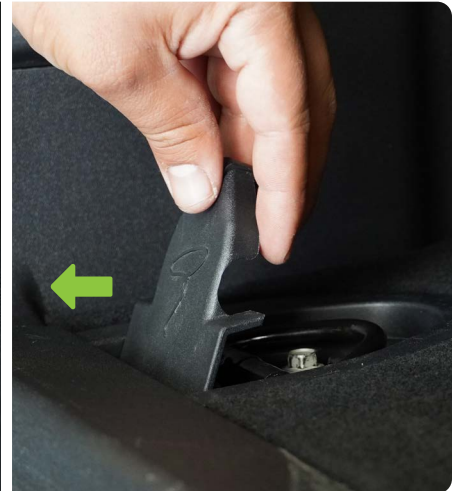

STEP 4 | Use a 10mm socket to remove the hardware securing the factory tie-downs to the vehicle.




INSTALLATION MANUAL

STEP 5 | Lift and fold the carpet forward to access the hardware securing the factory storage box to the vehicle.



STEP 6 | Use a 10mm socket to remove the hardware securing the factory storage box to the vehicle.

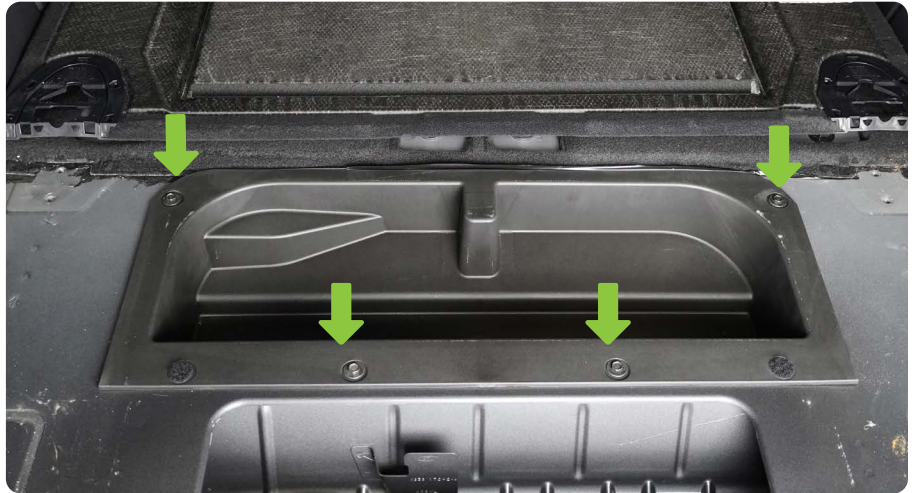

INSTALLATION MANUAL

STEP 7 | Use a 15mm deep socket to loosen the clamp securing the muffler to the exhaust tube.

Note: Skip to Step 12 if installing on Bronco Raptor.



STEP 8 | Remove the muffler from the exhaust hangers.

One is located next to the hitch, and the other is located between the muffler and driver side rear tire.

These may require some force to remove. Use WD-40 and a pry tool if necessary.



INSTALLATION MANUAL

STEP 9 | Remove the muffler by pulling it from the exhaust tube towards the rear of the vehicle.



STEP 10 | Use a 10mm socket and a trim clip tool to remove the factory hardware and plastic clip retainers securing the factory heat shield in place.

Then remove the factory heat shield.



INSTALLATION MANUAL

STEP 11 | Loosely secure the mounting plate using the factory hardware.




STEP 12 | Place the DV8 storage box under the vehicle and lift it to the mounting plate by reaching down through the empty space in the cab.

Loosely secure the box to the mounting plate using the provided M8 hardware.

Note: This step is easier with assistance.



STEP 13 | Secure using the provided M8 hardware and a #5 allen bit.

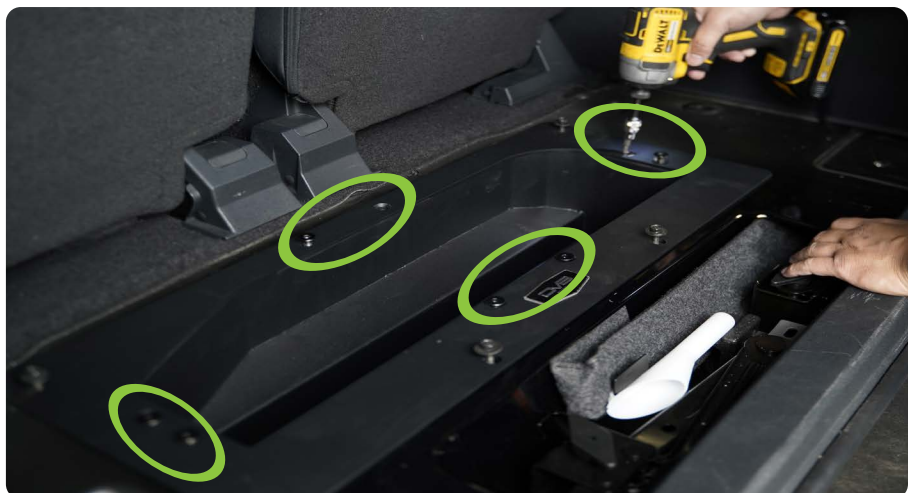

INSTALLATION MANUAL

STEP 14 | Use a 10mm socket to install the mounting plate using the factory hardware.



STEP 15 | Reinstall the muffler onto the exhaust tube by pressing it into place.

Note: Skip to Step 18 if installing on Bronco Raptor



STEP 16 | Finish securing the muffler by re-installing it onto the hangers.



INSTALLATION MANUAL

STEP 17 | Secure the clamp on the exhaust using a 15mm deep socket.



STEP 18 | Install factory tie-downs using a 10mm socket and the factory hardware.



STEP 19 | Install the factory tie-down covers by pressing them into place.

Then flip the carpet closed.





STEP 20 | Congratulations! You are finished with the install of the 21+ Ford Bronco Storage Compartment.

